



TOKU

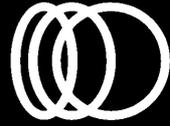

TOKU PNEUMATIC PRODUCTS

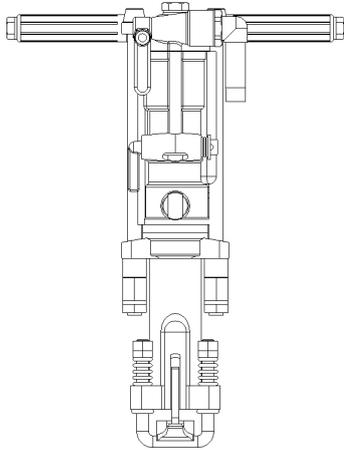

OPERATOR'S INSTRUCTIONS AND PARTS LIST

AIR HAND HAMMER MODEL TS-55

Symbol

Please observe all safety precautions listed below.



WARNING: This may cause an accident resulting in injury or death if it is not observed.



CAUTION: This may cause injury, damage or trouble to the air tool or equipment if it is not followed.

WARNING

To reduce risk of injury, everyone using, installing, repairing, maintaining changing accessories on, or working near this tool **MUST** read and understand these instructions before performing any such task.

DO NOT DISCARD - GIVE TO USER



Do not use a Rack Drill until this safety instruction has been read and understood completely.
This manual is necessary to help you to use the Rock Drill correctly.

WARNING

Do not use a Rock Drill before reading this safety instruction manual.
Obey all of the safety measures indicated in this manual

FOR DETAILED INFORMATION ABOUT TOKU AIR TOOLS AND EQUIPMENT
CONTACT TO :

TOKU PNEUMATIC TOOL CO., LTD
3-4, 4-Chome Katakasu, Hakata-Ku Fukuoka 812-0043 Japan

Phone: +81-92-431-0401 FAX: +81-92-431-1014
E-mail: int-op@toku-net.co.jp URL: <http://www.toku-net.co.jp/en/>

6th edition

Safety precaution when using an Air Tool

Always obey the law and the safety regulations during work.

Always wear proper clothing and use other protective equipment when operating an air tool.

WARNING

Always wear ear protection to prevent possible ear damage when operating an air tool at high noise level or for a long time.

WARNING

Heavy vibration from an air tool may result in injury to the hand, fingers and wrist of operator during a long period of operation.

Stop using an air tool if you feel pain or any problem concerning the use of an air tool. Resume use of an air tool after consulting with a doctor, confirming that there is no problem concerning the use of an air tool.

Always wear suitable working clothes when operating an air tool because a necktie or clothing with an open sleeve may get caught in the air tool during operation and may result in danger to the operator.

Always wear the following protective equipment during the operation of an air tool to protect the operator from getting hurt according to the type of the operation.

Gloves Dust proof mask Helmet Protective goggles Ear protection Working shoes
Setting up a dust vacuum device is recommended when operating an air tool indoors.



Rules for the purpose of safety, which must be observed

WARNING

It is absolutely necessary to receive permission from the manufacture for the purpose of any modifications concerning the air tool.

The manufacturer will not assume any responsibility concerning an accident resulting in injury, death or any trouble from an air tool due to the reconstruction without the permission of the manufacturer.

Always use GENUINE tool replacement parts recommended by the manufacturer when replacing any part of an air tool.

There must be a sticker or a sign indicating matters concerning the safety precautions and maintenance on a new air tool.

It is always important to keep this sticker of sign to be clean enough to read. It is available from the distributor of the manufacturer if it is lost.

Checking the workplace or work site

Do not permit people except operators get near the work site. Especially it is very dangerous to permit children into the working area.

Arranging and preparing the working area are the starting lines to ensure safety operation. Always maintain the work site or workshop to be in order and make sure they have enough light.

Always observe the rules such as warning, caution, manual, etc written in the working area.

Do not use the tool in explosive conditions.

Maintenance and replacement of the chisel

WARNING

Turn the valve cock of the compressor completely to the stop position, hold down the throttle valve and release the pressure in the hose completely before inspecting and replacing the chisel.

Inspect the chisel regularly, replace with a new one if any defect, such as a crack is found. Using a chisel with any defect is very dangerous.

Make sure that the tip of the chisel is sharp once again.

Hose connection

WARNING

Install the metallic cap of the air hose onto the body of the air tool firmly. The metallic cap will come off and cause the hose to run amuck due to vibration if the metallic cap is used in a loose condition. This will be very dangerous.

Check for damage of the air hose and in the connection part of the air tool body.
Confirm that there is no dust or dirt.
Do not point the air hose at anyone.
Never use compressed air to clean cloth.

Operation

CAUTION

Keep your feet away from the chisel. There would be a risk for injury if the chisel drops onto the operator's foot when the chisel is broken.

Never operate an air tool at an air pressure over the limit of the air tool.
Confirm that the retainer of the chisel is locked firmly before starting the air tool.
Never start an air tool without a chisel.
Always hold an air tool with both hands. Confirm that the handle is clean without any grease or oil.
Do not place the air tool on a person's foot.
Always keep well balanced during operation.
Never get on a tool. For example, do not put one foot on the handle of the air tool.
This may become a reason to get hurt especially when the air tool is broken.
Investigate the material of the work. For example, when using the tool for electric and telephone cable, water and drain pipe, etc, inspect for hidden cable or pipe underground before operating an air tool.
In case the chisel hits something during operation, stop the air tool immediately.
Restart the tool after the danger is cleared.

Service and maintenance

Turn the valve cock of the compressor completely to the stop position, hold down the throttle valve and release the pressure in the air hose completely before disconnecting an air tool.
Read and understand the instruction manual correctly. Contact with the selling agent or distributor of the manufacturer for further service information if necessary.
When it is necessary to use solvent to clean parts, be sure it is within the safety standards first, then use the solvent at a place with good ventilation.

Never be careless

Always concentrate on the work.
Always use common sense.
Eye vision and reaction deteriorate significantly in fatigue conditions after taking medicine, or drinking alcohol.
Never use an air tool when you are under the influence of these conditions.

Always direct exhaust away from yourself and others in the area.

Always disconnect tool from the air supply when not in operation.
If quick-disconnect couplings are used, separate the coupling from the tool with a leader hose.

Always make sure cutting chisel is securely latched in the tool before depressing throttle trigger.

Always hold cutting tool down firmly on the work before depressing throttle trigger.

Operator's instruction

Preparations before operation

Check following matters before operation.

Compressor

Capacity of the compressor is sufficient.

Whether the drain has been removed.

Air Hose

Whether there is any damage to the air hose. Whether the size and length is correct.

Clean the interior of the air hose using compressed air.

When using two or more tools, all except leader hose should be 1" or large.

(See diagram above for piping and fittings.)

Inspection of the Rock Drill

Whether there is looseness in the screw thread areas.

Whether there is a crack or breakage in the main body.

Inspection of rod

Whether the rod is suitable for the shank of the Rock Drill.

Whether the rod is suitable for the work.

Whether there is wear or cracks.

Whether the rod is mounted correctly.

Wearing protective equipment

Whether the helmet, protective goggles, ear protection, gloves and working shoes are worn correctly.

Air Supply

Whether the air pressure is suitable. For best operation, supply tool with 90psig (6.2bar) of clean, dry air.

Higher pressure drastically reduces tool life and can void warranty. (600kPa for max)

Lubrication

To flush out GUM and DIRT – you should do the following two steps EACH DAY.

1. (Before the shift), pour a liberal quantity of gum solvent oil into the tool's air inlet.

2. Connect tool to air line and operate. Repeat this procedure before storing the tool.

Air line lubricator should be used in conjunction with the integral oiler.

Repeat this procedure before storing the tool.

Whether there is sufficient oil in the line oiler.

Whether the oil is suitable for the Rock Drill. (Oil equivalent to #100 Rock Drill oil)


The importance of adequate and continuous lubrication cannot be overemphasized.

A few minutes operation without oil may severely damage the valve parts, cylinder and piston.

Hose Connection

Whether there is any dust, or damage to the air connection portion.

Whether the air hose is tight.

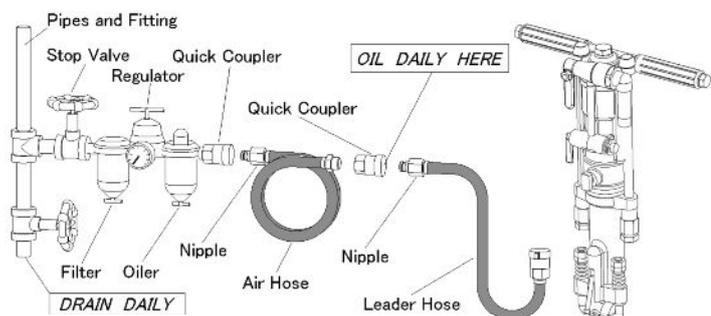

Operation guide

Maintain good balance on both feet. Keep proper distance from the chisel of the Rock Drill.

Never put your hand near the rod when using the Rock Drill horizontally.

Push the Rock Drill against the object firmly using the handle before turning the throttle valve level.

Obey the law and safety regulations.

CAUTION: Pressing the Rock Drill with proper force

Pressing the Rock Drill on the object too strong, much load is applied to rotation parts and these parts wear out quickly.


It depends on the rock quality but basically the maximum pressing force at vertical drilling is 55kgf.

If the Rock Drill is used for a long time with higher pressing force than maximum value, it might lead to the quick wear or premature failure for internal parts.

Conversely, if pressing force is too weak, the Rock Drill works intensely and cause high vibration.

Then it might lead to high burden and early fatigue for workers, and lead to quick wear for the consumable parts.

MAX Force : 55kgf

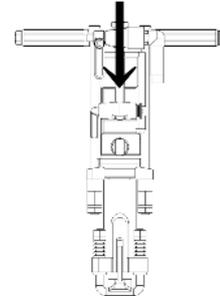

Inspection and maintenance

WARNING

Turn valve cock of the compressor to the stop position first, turn the throttle valve level of the Rock Drill and release the excess pressure in the air hose completely, then disconnect the Rock Drill from the air hose and finally inspect the Rock Drill.

Inspection and storage for a Rock Drill

Clean the exterior surface using a cloth.

Regularly inspect the tightening torque on the bolts.

Inspect whether there are any cracks or damage in the Rock Drill.

Storage of the Rock Drill

Apply 3 cc of oil from the air inlet. operate the Rock Drill for about 5 seconds after completing work.

Repeat above operation 2-3 times before storing the Rock Drill.

Put a cap on the air inlet of the Rock Drill to prevent any dust or foreign material from entering the Rock Drill. Keep the Rock Drill in a dry place.

Loss of power/erratic action (possible causes)

1. Reduced compressor output.
2. Excessive drain on air line.
3. Moisture or restricted pipe, hose or fittings.
4. Improper size or poor condition of pipe, hose or fittings.
5. Incorrect shank size of chisel, or excessively worn shank.
6. Free running (or blank blow) can cause damage to the tool. Always hold the tool down to the work.
7. Loosening of side bolts or back head bolts will cause loss of power and can cause damage to the tool.
Periodic inspection of bolt torque at regular intervals (at least once a week if tool is being used regularly) is recommended.

If everything else appears to be in order, then disassemble tool, replace worn or damaged parts, clean, reassemble and lubricate.

Replacement parts

Always use **GENUINE TOKU TOOL Replacement Parts**.

When replacement parts are required, order by Part Number and Description from the Parts List.

Air consumption at air pressure of 600kPa

2.6 m³/min


Sound levels (ISO 15744)

Sound pressure level L_{pA}	108.43 dB(A)	Uncertainty $K_{pA} = K_{WA}$ 3 dB
Sound power level L_{WA}	119.43 dB(A)	

Vibration value (ISO 28927-10)

Declared vibration emission value a_{hd}	Uncertainty K
25 m/s ²	3.0 m/s ²

Location of Serial number, Year of manufacture and Name plate

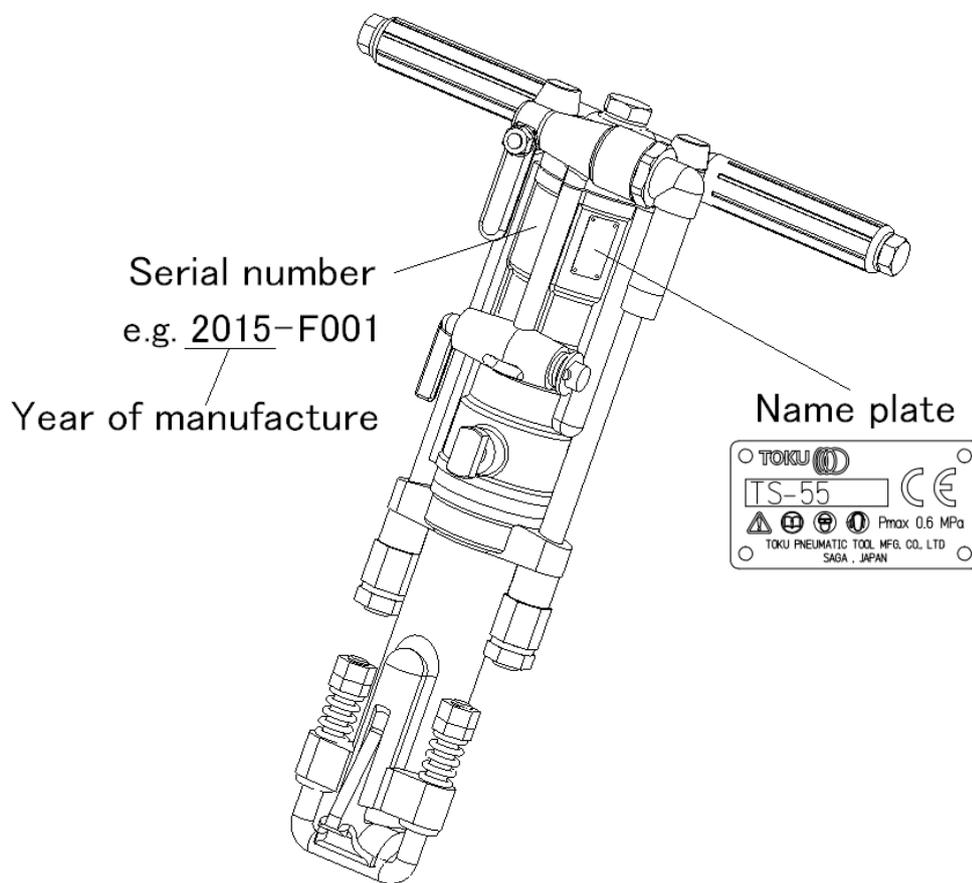

MEMO

(2) We :

TOKU PNEUMATIC TOOL MFG. CO., LTD.

5733, Minobaru, Miyaki-machi, Miyaki-Gun, Saga Japan

(3) Technical file authorized representative :

S.Fukuyama, Manager, Manufacturing Div.

TOKU PNEUMATIC TOOL MFG. CO., LTD.

5733, Minobaru, Miyaki-machi, Miyaki-Gun, Saga Japan

(4) declare that the product(s) : **ROCK DRILL**

(5) Model/Type : S-55

(6) Version(s) : S-55, TS-55, PK 280 L

(7) Starting Serial No. : 11J001

(8) is in conformity with the requirement of the council Directives on the approximation of the laws of the Member States relating :

(9) to "**Machinery**" 2006/42/EC

(10) applicable harmonized standard(s) : EN ISO 12100

(11) Place and date : Saga Japan, 03/10/2011

(12) NAME and POSITION of issuer : **S.Fukuyama, Manager, Manufacturing Div.**



ESPAÑOL (SPANISH)

(1) **DECLARACION DE CONFORMIDAD CE** - (2) Nosotros **TOKU** - (3) Archivo técnico disponible en - (4) declaramos que el producto : - Perforador - (5) tipo de máquina : - (6) versión : - (7) con comienzo de nº de serie : - (8) es conforme a los requisitos de la Directiva del Consejo sobre la aproximación de las leyes de los Estados con relación - (9) a la "**maquinaria**" **2006/42/CE** - (10) normas armonizadas aplicadas : - (11) Nombre y cargo del expedidor : - (12) Fecha

DEUTSCH (GERMANY)

(1) **EG-KONFORMITÄTSERKLÄRUNG** - (2) Wir, **TOKU** - (3) Technische Datei beim EU - (4) erklären hiemit, daß das (die) Produkt(e) : - Felsbohrer - (5) Typ(en) : - (6) version : - (7) serien Nr. beginn : - (8) den Anforderungen der EG-Richtlinie zur Angleichung der Rechtsvorschriften der Mitgliedsstaaten - (9) für "**Maschinen**" **2006/42/EG** - (10) geltende harmonisierte Norme(n) : - (11) NAME und EIGENSCHAFT des Ausstellers : - (12) Datum

FRANÇAIS (FRENCH)

(1) **DECLARATION DE CONFORMITE** - (2) Nous **TOKU** - (3) Dossier technique disponible auprès du siège social - (4) déclarons que les produits : - Marteau Perforateur - (5) type : - (6) version : - (7) premier N° de série : - (8) est (sont) en conformité avec les exigences de la Directive du conseil, concernant les législations des états membres relatives - (9) aux "**Machines**" **2006/42/CE** - (10) Norme(s) harmonisée(s) applicable(s) : - (11) NOM et FONCTION de l' émetteur : - (12) Place et data

ITALIANO (ITALIAN)

(1) **DICHIARAZIONE DI CONFORMITÀ CE** - (2) La Società : **TOKU** - (3) File tecnico disponibile dal - (4) dichiara che il(i) prodotto(i) : - Perforatore - (5) tipo : - (6) versione : (7) avente numeri di serie che partono dal suffisso : (8) è (sono) in conformità con le esigenze previste dalla Direttiva del Consiglio, sulle legislazioni degli Stati membri relative : - (9) alle "**macchine**" **2006/42/CE** - (10) norma(e) armonizzate(e) applicabile(i) : - (11) NOME e FUNZIONE del dichiarante - (12) Data

PORTUGUÊS (PORTUGUESE)

(1) **DECLARAÇÃO DE CONFORMIDADE CE** - : (2) Nós **TOKU** - (3) Ficheiro técnico disponível na - (4) declaramos que o produto : - Martelo Perfurador - (5) tipo de máquina : - (6) versão : - (7) N.º inicial de Série - (8) está em conformidade com os requisitos da Directiva do Conselho, referente às legislações dos Estados-membros relacionados com : - (9) "**maquinaria**" **2006/42/CE** - (10) Normas harmonizadas aplicáveis - (11) Nome e cargo do emissor : - (12) Data

NEDERLANDS (DUTCH)

(1) **E.G.-VERKLARING VAN OVEREENSTEMMING** - (2) De firma : **TOKU** - (3) Technisch bestand verkrijgbaar - (4) verklaart hierbij dat het (de) produkt(en) : - Boorhammer - (5) type : - (6) versie : - (7) vanaf serie nummer : - (8) in overeenstemming is (zijn) met de vereisten van de richtlijn van de Raad inzake de onderlinge aanpassing van de wetgevingen van de lidstaten betreffende : (9) "**machines**" **2006/42/EG** - (10) geldige geharmoniseerde norm(en) - (11) NAAM en FUNCTIE van de opsteller : - (12) Datum


ΕΛΛΗΝΙΚΑ (GREEK)

(1) **ΔΗΛΩΣΗ ΠΙΣΤΟΤΗΤΑΣ ΕΚ** - (2) Η εταιρεία : **TOKU** - (3) Τεχνικός φάκελος διαθέσιμος - (4) δηλώνει υπεύθυνα ότι το(τα) προϊόν(-ντα) : - Περιστροφικό Αερόφυρο - (5) τύπου(-ων) : - (6) εναλλακτικοί τύποι : - (7) αρχή σειράς Νο. : - (8) είναι σύμφωνο(-α) προς τις απαιτήσεις της Οδηγίας του Συμβουλίου που αφορά την προσέγγιση των νομοθεσιών των κρατών τις σχετικές με : - (9) τα "**μηχανήματα**" **2006/42/ΕΚ** - (10) εφαρμοστέο(-α) εναρμονισμένο(-α) πρότυπο(-α) : - (11) ΟΝΟΜΑ και ΑΡΜΟΔΙΟΤΗΤΑ του δηλούντος : - (12) Ημερομηνία

TS-55

Parts List

Exploded View

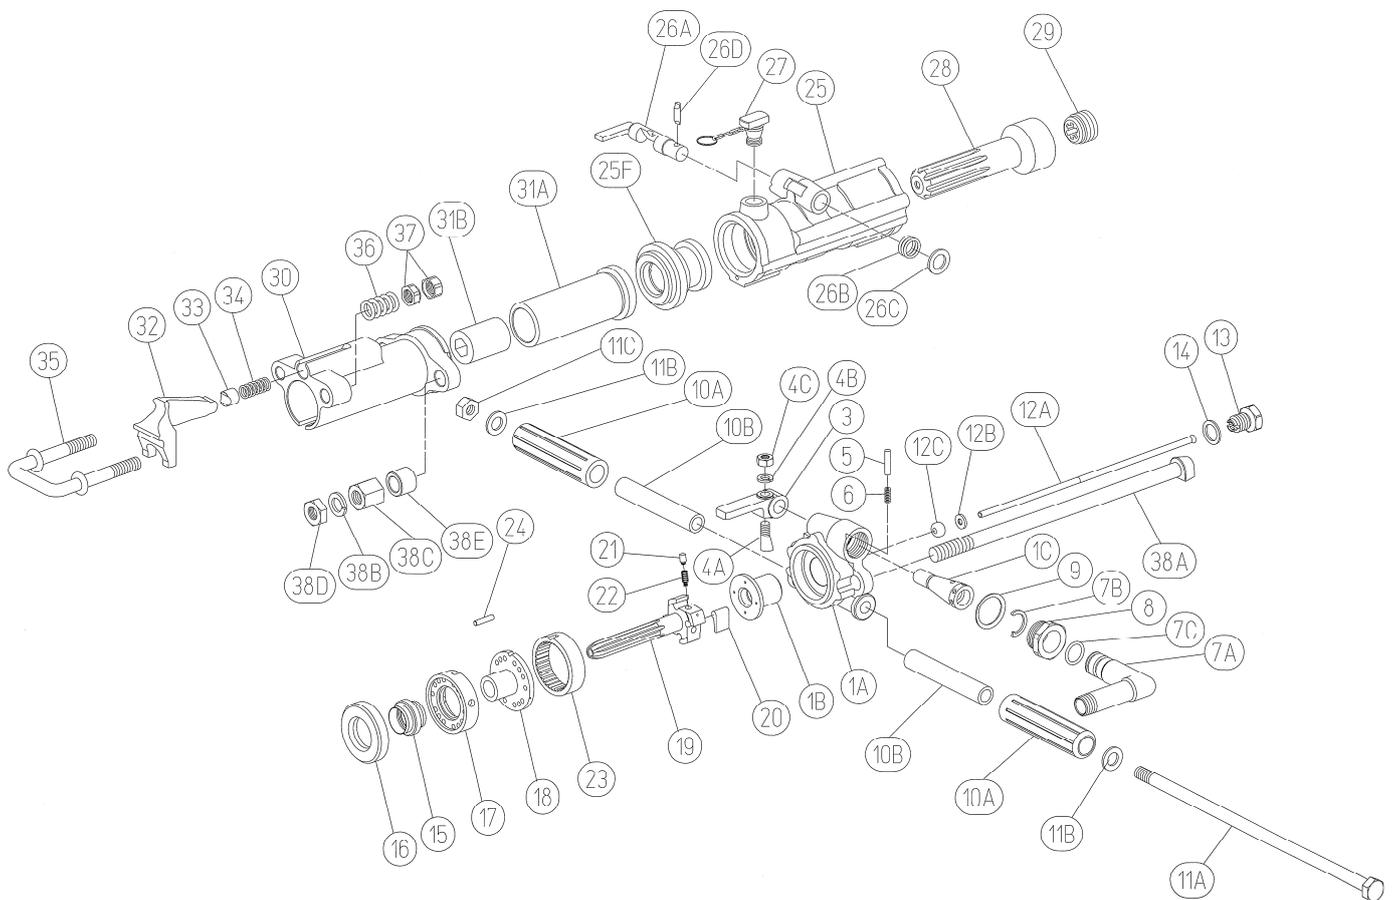

TS-55

MODEL CODE	SHANK SIZE
53-03-01	7/8" × 3-1/4"
53-03-02	7/8" × 4-1/4"
53-03-06	1" × 4-1/4"

Symbol No.	Parts No.	Description	Q'ty Req.	Symbol No.	Parts No.	Description	Q'ty Req.
1	43-03-01-A0B	BACK HEAD CP	1CP	21	43-03-01-H30	PAWL PLUNGER	4
1A	43-03-01-A00	BACK HEAD	(1)	22	13-08-03-036	PAWL SPRING	4
1B	43-03-01-A10	BACK HEAD BUSHING	(1)	23	43-03-01-G70	RATCHET RING	1
1C	43-03-01-A40	THROTTLE VALVE	(1)	24	13-04-03-031	RATCHET RING DOWEL PIN 6.35X30	1
3	43-03-01-A50	THROTTLE VALVE HANDLE	1	25	43-03-01-C8B	CYLINDER	1
4A	13-15-03-021	THROTTLE VALVE HANDLE BOLT	1	25F	43-03-01-D10	CYLINDER BUSHING	1
4B	13-13-03-028	SPRING WASHER W7/16	1	26A	43-03-01-P70	EXHAUST CONTROL VALVE	1
4C	13-42-03-008	HEX. NUT W7/16	1	26B	13-08-03-037	EXHAUST CONTROL SPRING	1
5	43-03-01-M80	DETENT PLUNGER	1	26C	13-13-09-020	WASHER M20	1
6	13-08-03-035	DETENT SPRING	1	26D	43-03-01-P90	EXHAUST CONTROL PIN	1
7A	43-03-01-B00	AIR CONNECTION TUBE (PT)	1	27	43-03-01-R5A	FILLER PLUG CP	1CP
	43-03-06-B10	AIR CONNECTION TUBE (NPT)	(1)	28	43-03-01-E50	PISTON	1
7B	43-03-01-B20	AIR CONNECTION CLAMP	1	29	43-03-01-H10	RIFLE NUT	1
7C	13-11-01-023	O-RING P-24	1	30	43-03-06-W70	FRONT HEAD (L)	1
8	43-03-01-B30	AIR CONNECTION NUT	1		43-03-01-W60	FRONT HEAD (S)	(1)
9	43-03-01-B50	AIR CONNECTION WASHER	1	31A	43-03-06-H60	ROTATION SLEEVE (L)	1
10A	13-66-03-008	GRIP HANDLE	2		43-03-01-H50	ROTATION SLEEVE (S)	(1)
10B	43-03-01-C50	GRIP HANDLE PIPE	2	31B	43-03-06-H80	SLEEVE BUSH 1" (L)	1
11A	13-15-03-022	HANDLE BOLT	1		43-03-02-H80	SLEEVE BUSH 7/8" (L)	(1)
11B	13-13-07-016	WASHER M16	2		43-03-01-H70	SLEEVE BUSH 7/8" (S)	(1)
11C	13-44-11-016	HEX. NUT W5/8-11	1	32	43-03-01-L20	STEEL PULLER	1
12A	43-03-01-J41	BLOW TUBE	1	33	43-03-01-M40	STEEL PULLER PIVOT	1
12B	43-03-01-J71	BLOW TUBE WASHER	1	34	13-08-03-038	STEEL PULLER SPRING	1
12C	13-63-03-015	BLOW TUBE RUBBER	1	35	43-03-01-M5A	STEEL PULLER YOKE CP	1
13	43-03-01-J50	BLOW TUBE GLAND	1	36	13-08-03-039	STEEL PULLER YOKE SPRING	2
14	43-03-01-J60	BLOW TUBE GASKET	1	37	43-03-01-M30	STEEL PULLER YOKE NUT	2
15	43-03-01-F80	VALVE	1	38A	43-03-01-W00	THROUGH BOLT	2
16	43-03-01-G10	VALVE CHEST (LOWER)	1	38B	13-13-03-048	SPRING WASHER W3/4	2
17	43-03-01-G00	VALVE CHEST (UPPER)	1	38C	13-42-03-009	THROUGH BOLT NUT (L)	2
18	43-03-01-G40	VALVE PLUG	1	38D	13-42-03-010	THROUGH BOLT NUT (S)	2
19	43-03-01-H00	RIFLE BAR	1	38E	43-03-01-R90	SPACER RING	2
20	43-03-01-H20	ROTATION PAWL	4				

MEMO
